



# JVC

## SPEAKER SYSTEM

### XS-SR3 INSTRUCTIONS



Thank you for purchasing a JVC product.

#### For customer use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.

Serial No.

0809WMKMDWJMM GVT0291-002B[J/C]  
© 2009 Victor Company of Japan, Limited EN

### Warnings, Cautions and Others / Mises en garde, précautions et indications diverses

#### For U.S.A.

**Caution:** Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Pour les États-Unis

**Attention :** Les changements ou les modifications qui ne sont pas explicitement approuvés par la partie responsable de l'observance pourraient mettre fin au droit de l'utilisateur d'utiliser le matériel.

**Remarque :** Cet appareil a été testé et il s'est avéré conforme aux limites applicables à un appareil numérique de classe B, en vertu de la Partie 15 des Règles de la FCC. Ces limites sont conçues de manière à assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre une énergie de haute fréquence et, s'il n'est pas installé et utilisé en conformité avec les instructions, il peut causer des interférences nuisibles aux communications radio. Il n'y a, toutefois, aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil cause effectivement des interférences nuisibles à la réception de la radio ou de la télévision, ce qu'on peut établir en mettant l'appareil en marche et à l'arrêt, nous encourageons l'utilisateur à tenter de corriger l'interférence par une ou plusieurs des mesures suivantes :

- réorienter ou déplacer l'antenne de réception ;
- accroître la séparation entre l'appareil et le récepteur ;
- brancher l'appareil dans une prise ou un circuit autre que celui auquel le récepteur est branché ;
- consulter un vendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

#### WARNING

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

#### AVERTISSEMENT

POUR PRÉVENIR LES RISQUES D'INCENDIE OU DE CHOC ÉLECTRIQUES, NE PAS EXPOSER CE APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

#### For Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

#### Pour le Canada

CET APPAREIL NUMÉRIQUE RESPECTE LES LIMITES DE BRUITS RADIOÉLECTRIQUES APPLICABLES AUX APPAREILS NUMÉRIQUES DE CLASSE B PRÉSCRITES DANS LA NORME SUR LE MATÉRIEL BROUILLEUR; "APPAREILS NUMÉRIQUES", NMB-003 ÉDICTÉE PAR LE MINISTRE DES COMMUNICATIONS.

#### CAUTION

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

#### ATTENTION

Les piles ne doivent en aucun cas être exposées à une chaleur excessive (lumière du soleil, feu, etc.).

#### CAUTION

The button in any position does not disconnect the mains line.

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).

The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

- When the System is on standby, the STANDBY lamp lights red.
- When the System is turned on, the STANDBY lamp turns green.

The power can be remote controlled.

#### ATTENTION

La touche dans n'importe quelle position, ne déconnecte pas le système du secteur. Déconnectez la fiche de secteur pour mettre l'appareil complètement hors tension (le témoin STANDBY s'éteint).

La fiche secteur ou un coupleur est utilisé comme dispositif de déconnexion de l'appareil, et l'appareil déconnecté doit être prêt à être utilisé.

- Quand le système est en attente, le témoin STANDBY est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY est allumé en vert. L'alimentation peut être télécommandée.

#### CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

#### ATTENTION

- Ne bloquez pas les orifices ou les trous de ventilation. (Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.

#### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

#### ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

Rating label is placed on the exterior of the bottom.

L'étiquette des caractéristiques nominales se trouve sur l'extérieur du coffret.



[European Union only]  
[Union européenne seulement]

### Specifications

Output power:

**2.5 W per channel, RMS at 4 Ω at 1 kHz, with 10% total**

#### harmonic distortion

Speaker Type: Full-Range Bass-Reflex Type (Magnetically-Shielded Type)

Speaker: 4 cm (1-5/8") cone × 2

Speaker Impedance: 4 Ω

Analog Input (ANALOG IN): 125 mV/50 kΩ

Digital Input (DIGITAL IN): -21 dBm to -15 dBm (660 nm ±30 nm)

iPod Dock Output: DC 5 V --- 500 mA

Power Source: DC 6 V --- 1 A (DC IN)

AC Adaptor (AA-R607)

• INPUT: AC 100 V - 240 V ~, 50 Hz/60 Hz, 1.0 A

• OUTPUT: DC 6 V --- 1 A

Dimensions (W × H × D): 390 mm × 103 mm × 136 mm  
(15-3/8" × 4-1/16" × 5-3/8")

Mass: 0.55 kg (1.3 lbs)

#### Accessories

- Remote control (× 1)
- Lithium coin battery CR2025 (× 1); Installed in the remote control when shipped.
- AC adaptor (AA-R607) (× 1)
- AC power cord (× 1)
- Core filter (× 1)
- Brackets for iPod (× 3)

- Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

## Precautions

- Install the System on a place which is level, dry, and neither too hot nor too cold; between 5°C and 35°C (41°F and 95°F).
- Do not use the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or vibration.
- Leave sufficient distance between the System and the TV.
- Do not insert any metallic objects or liquids into the System.
- Do not handle the power cord with wet hands.
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- Do not pull on the cord to unplug the power cord. When unplugging the power cord, always grasp and pull the plug so as not to damage the cord.
- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- When away on holiday or for other reasons for an extended period of time, disconnect the power cord from the wall outlet.
- Stains on the System should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water diluted neutral detergent and wrung well, then wipe clean with a dry cloth.

- If water gets inside the System, turn the power off and disconnect the power cord from the wall outlet, then call the store where you purchased this System. Using the System in this condition may cause a fire or electrical shock.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
  - DO NOT wipe it forcefully.
  - DO NOT wipe it with thinners, benzines or other organic solvents including disinfectants.
  - DO NOT apply any volatile substances such as insecticides to it.
  - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

 
### About the built-in speakers

The speakers are magnetically shielded to avoid color distortions on TVs. If the color on a TV is distorted, perform the following procedure:

- Turn off the TV's main power switch or unplug it before installing the System. Then wait at least 30 minutes before turning on the TV's main power switch again.

Some TVs may still be affected even though you have followed the above procedure. If this happens, move the System away from the TV.

## Connection

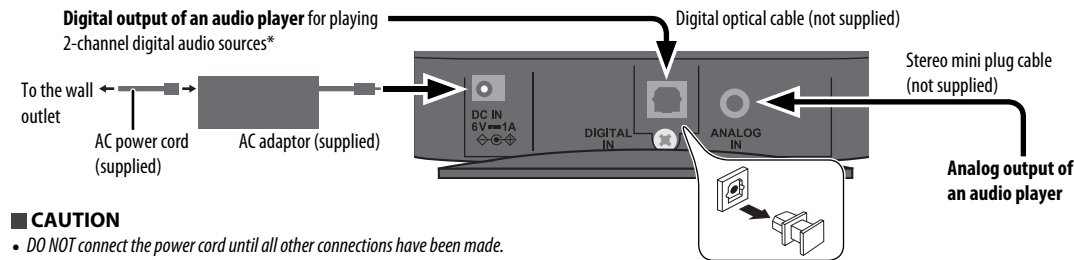

### CAUTION

- DO NOT connect the power cord until all other connections have been made.
- To avoid the risk of fire and to prevent damage,
  - Do not use any AC adaptors other than the one supplied.
  - Do not use the supplied AC adaptor for other equipment.

 
## Using the core filter

Attach the provided core filter to the power cord to reduce interference.


### 1 Release the stopper of the core filter.



### 2 Run the cable through the core filter, and wind the cable firmly once inside the cutout of the core filter as shown in the illustration.

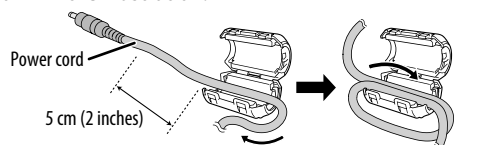

### 3 Close the core filter until it clicks shut.

 


### CAUTION

Do not damage the cord by applying excessive force when winding.

- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack, or start a fire.
- Do not poke the battery with tweezers or similar tools. Doing this may cause the battery to give off heat, crack, or start a fire.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.
 
## Basic Operation

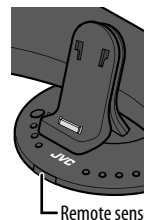

### 1 Press **POWER** to turn on the power.

The standby lamp turns green.

### 2 Press **AUDIO IN DIGITAL**, **AUDIO IN ANALOG**, or **iPod** to select the source.

iPod starts playing back. Go to step 4.

For other equipment, go to step 3.

### 3 Start playing back the connected equipment.

### 4 Press **VOL +/-** to adjust the volume.

- To turn off the sound temporarily, press

#### FADE MUTING.

- To restore the sound, press the button again or adjust the volume.

- To turn off the operation sounds, press

#### BEEP SOUND.

### CAUTION

Set the volume to the minimum level before starting playback. If the volume is set to a high level, the sudden blast of sound may damage your hearing and blow out the speakers.

## Enjoying Surround Mode

This System is equipped with Virtual Dolby Surround. In Surround Mode, it creates a rich surround sound effect with two speakers.

To activate Surround Mode, press **SURROUND MODE 1/2**.

Pressing the button beeps...

- Once when **SURROUND MODE 1** is selected, or

- Twice when **SURROUND MODE 2** is selected.

- **SURROUND MODE 1:** Creates a surround sound effect.
- **SURROUND MODE 2:** Creates a richer surround sound effect than **SURROUND MODE 1**.

- To cancel, press **SURROUND OFF**.

## Operating iPod device

- To select a track, press **LEFT/RIGHT**.
- For forward search/reverse search, press and hold **LEFT/RIGHT**.
- For Shuffle play, press **SHUFFLE**.
- For Repeat play, press **REPEAT**.
- To put iPod into sleep mode, press and hold **iPod**.

### iPod menu operation

#### 1 Press **MENU** to display the menu.

 
#### 2 Press **UP** or **DOWN**, then **SELECT** to select a menu item.

Refer also to the instruction manual for the iPod for details.

- To go back to the previous menu, press **MENU**.

## Rotating the dock

You can rotate the dock for iPod touch/iPod nano (4th Generation). To hold the iPod in place, attach the bracket (supplied) which fits your iPod to the dock.

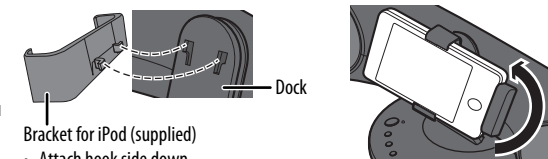

Bracket for iPod (supplied)

- Attach hook side down.

### NOTE

- While inserted into the dock, the battery of iPod is always charged through the System.
- Do not carry the System with iPod connected. You might drop the iPod or it might cause damage to the iPod or the System.
- Do not touch or hit the iPod terminal pins or connector pins in the dock directly. It might cause damage to the pins.
- Do not rotate the dock with excessive force.

### Compatible iPod models

iPod nano 1GB/2GB/4GB	iPod classic 80GB/120GB/160GB
iPod nano (2nd Generation) 2GB/4GB/8GB	iPod photo (4th Generation) 20GB/30GB/40GB/60GB
iPod nano (3rd Generation) 4GB/8GB	iPod video (5th Generation) 30GB/60GB/80GB
iPod nano (4th Generation) 8GB/16GB	iPod touch 8GB/16GB
iPod mini 4GB/6GB	iPod touch (2nd Generation) 8GB/16GB/32GB
iPod mini (2nd Generation) 4GB/6GB	
iPod (4th Generation) 20GB/40GB	

If iPod does not play correctly, update iPod software to the latest version.

- For details about updating iPod, check on the Apple web site <<http://www.apple.com>>.

- **JVC does not assure the compatibility of iPod released after April 2009 with this System.**

- **JVC is not responsible for any loss of or damage to iPod that might result from the use of this product.**

## Troubleshooting

If you have a problem with this System, check this list for a possible solution before calling for service.

### Power does not come on.

- Plug in the power cord securely.

### No sound comes out of the speakers.

- Adjust the volume level.
- The sound has been turned off temporarily. Press **FADE MUTING**.

### The remote control does not work.

- Pull out the insulation sheet.
- Replace the battery if exhausted.
- Avoid sunlight shining directly on the remote sensor.
- Do not block the path between the remote control and the remote sensor on the System.
- Point the remote control at the remote sensor on the System.
- Move closer to the System.